




Installation Instructions

CP-GL-BLK-N2 or CP-GL-SS-N2

Cover Plate with NEMA 2 Compression Gland Cable Exit

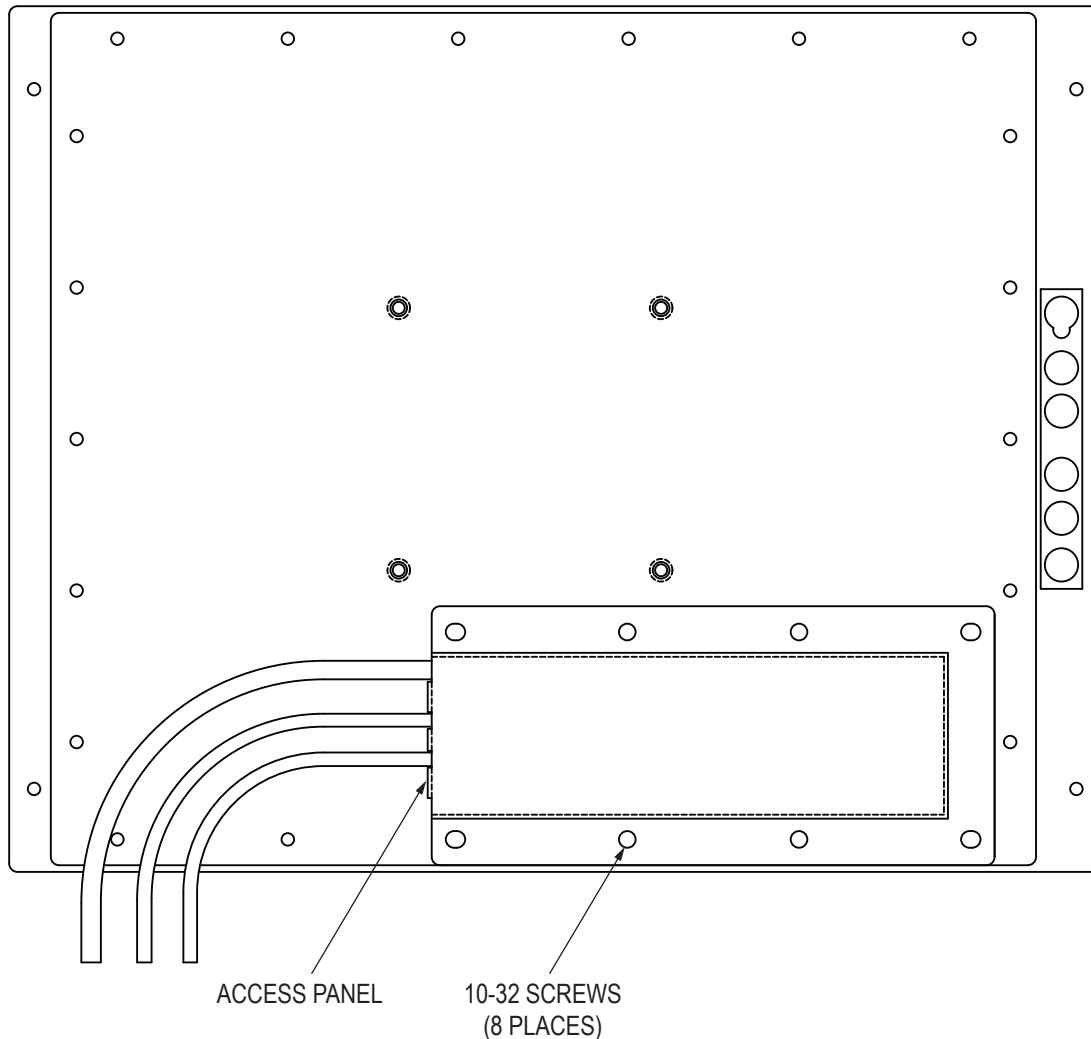

1. Remove and set aside the eight 10-32 screws and sealing washers installed around the cable exit opening on the rear cover of the monitor.
2. Connect all cables to the monitor. Secure cables by completely turning all strain relief screw locks. Use the USB strain relief clip to secure USB cables. Secure AC power cable with supplied retaining clip.
3. Position the cover plate on the rear of the monitor, routing cables through access panel to the left.
4. Attach the cover plate to the monitor using the eight screws and washers that were removed in step 1. Fully tighten all eight screws, then back off one full turn.

NOTE: Two extra screws and washers are inside the cavity if needed.